

LS-101 Daylighting Controller

SPECIFICATIONS

Light Sensor range 1 to 1400 footcandles
 ON Setpoint range 1 to 850 footcandles
 Automatic Deadband..... 25%, 50%, 75%, 100%
 Status Indicator Multi-function green LED
 Power requirements 12/24 VDC, min 10 mA
 Total power requirements are determined
 by the controlled device.
 Output signal 12/24 VDC, max 120 mA
 Location Suitable for dry, interior locations
 Environment 50° to 104° F, less than 90% rh
 Dimensions 2.4" diameter x 0.7" depth
 (61mm x 17mm)

DESCRIPTION

The Watt Stopper LS-101 is an interior photosensor that automatically turns a zone of lights ON and OFF based on daylight levels. It is a low voltage device intended to signal a power pack or relay panel.

The LS-101 is designed to require minimal adjustment at startup. For more advanced applications, an onboard display and two pushbuttons allow for adjustments, if needed. The display is hidden under a removable cover. To assist with adjustment, the LS-101 displays the current light level reading.



Figure 2: Cover removed

The LS-101 is designed to be either ceiling- or wall-mounted. It has a wide range light sensor capable of measuring from 1 to 1400 footcandles.

SELECTING A LOCATION

The LS-101 controls lights in areas that receive enough daylight so that the electric lights can be reduced or switched OFF. It is important to select a location for the LS-101 where the daylight is representative of the daylight throughout the controlled zone. Note the path of shadows. Daylighting control will be problematic if part of a controlled zone is in shadows while another part has plentiful daylight.

When the primary source of daylight is a window (sidelighting), the LS-101 is typically ceiling mounted within the daylit zone which extends 12 feet or less in from the window. A good location is often between the window and the first row of fixtures. Figure 3 shows a typical mounting location for a sidelit application.



Figure 1: LS-101

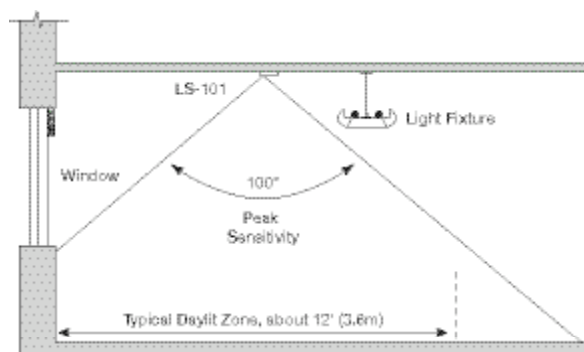


Figure 3: LS-101 Field of view, sidelight application

When the primary source of daylight is a skylight (toplighting), there are several options for mounting the LS-101. The recommended mounting locations are shown in Figure 4.

- ① Ideally, the sensor is mounted on the South sidewall looking North across the light well.
- ② It could also be mounted on the ceiling next to the skylight, looking down at the floor.

A skylight may produce 5000 footcandles or more. If the sensor is mounted so that it looks up into the skylight, the daylight will exceed the maximum OFF setpoint of 1275fc which is too low for this orientation.

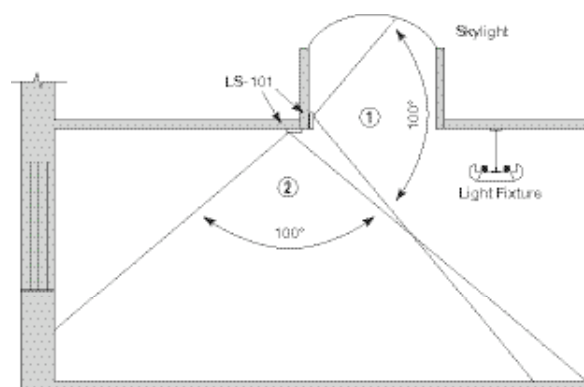


Figure 4: LS-101 Skylight application

Closed Loop or Open Loop

The LS-101 can be used as a closed loop device or as an open loop device. When the LS-101 can view both daylight and light from the controlled electric lights, it is working as a closed loop device. When the LS-101 can only see daylight, it is working as an open loop device.

In both cases, having adequate separation of the ON and OFF setpoints is important. When working in closed loop mode, it is critical to have enough separation between the ON and OFF settings (known as deadband) to compensate for the reduction of the controlled lights. If not, when the controlled lights switch OFF, the light level will fall below the ON setpoint and the lights switch back ON.

OPERATION

The LS-101 features adjustable ON and OFF setpoints, OFF time delay as well as several features to simplify adjustment. For basic operation, these three parameters are all that may need to be adjusted.

While the ON and OFF setpoints are independently adjustable, the LS-101 features a built-in minimum deadband. Therefore, these two setpoints are always automatically separated by at least a minimum amount of deadband.

When the sensed light level drops below the ON setpoint for 20 seconds, the output signal switches ON. In the LS-101's default operation, this means that the LS-101 provides 24 VDC on the output (blue wire) when the lights should be ON. However, it is also possible to invert the output state. (Please see "Invert output" for further explanation.)

Adjusting the ON setpoint also automatically adjusts the OFF setpoint to maintain the programmed deadband. Once the ON setpoint is changed, you can further adjust the OFF setpoint. In applications where the LS-101 sees the lighting from the controlled fixtures, it is important to have the ON and OFF setpoint separated by a deadband of at least as much as the light provided by the controlled fixture.

Test Mode

The Test mode temporarily shortens all of the time delays so that the light level switching functions can be quickly tested. Test mode is invoked in the installation process in two ways.

- After either an ON or OFF setpoint has been changed, the LS-101 remains in Test mode for one minute. The LED blinks ON and OFF rapidly to indicate Test mode. During this minute, test the LS-101 operation by either blocking the light reaching the sensor or by shining a bright light into the sensor. At the end of the minute, the normal time delays are reinstated.
- Test mode can be activated for a longer period through a menu item on the display. From the Test mode menu, you can turn ON Test mode for 30 minutes. Once turned ON, it can also be turned OFF from the Test mode menu.

Temporary Override

When using the display and buttons, it is possible to temporarily override the output ON or OFF from the display and onboard buttons. This feature is useful for observing that the correct lights are being controlled and all other components in the system are functioning correctly. (Please see the Display functions for further explanation.)

Invert output

This feature is used to control devices that require a +24 VDC signal when the lights should be turned OFF and 0 VDC when the lights should be turned ON. The normal operation of the LS-101 provides a +24 VDC signal when the lights should be turned ON, but using this feature, the operation can be reversed from the Adjustment Menu Setup display to satisfy the application.

Wall switch override

The LS-101 provides a connection for an optional low voltage, normally-open, momentary-contact wall switch override.

This switch can be used to temporarily turn the lights ON when the LS-101 has switched them OFF because the light level is above the setpoint. When the wall switch is pressed, the lights switch ON, and automatic light level control is temporarily suspended for one hour. If during this period the wall switch is pressed again, the override is canceled and the lights are restored to automatic control.

The wall switch requires a two wire momentary switch. See Figure 10 for more information.

Hold ON while occupied

This is an optional feature that prohibits high light levels from turning OFF the controlled light as long as the space remains occupied. This feature allows energy savings from daylighting control while limiting impact on occupants who might be distracted or annoyed if the lights switch OFF while they are in the space.

This feature requires that the signal wire from an occupancy sensor be connected to the LS-101. See Figure 9.

The LS-101 will not switch OFF while an occupancy signal (+24 VDC) is present on the white wire.

This function is enabled or disabled from the display's Adjustment Menu SETUP submenu. It allows the occupancy signal to be connected to the LS-101 at installation but later be ignored without having to disconnect it.

INSTALLATION

The LS-101 is designed to be mounted in either of two ways.

For suspended ceiling tile, a threaded nipple with a lock nut is attached to the LS-101. See Figure 5.

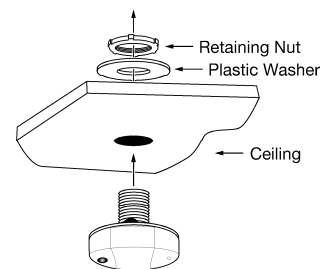


Figure 5: Ceiling tile mount

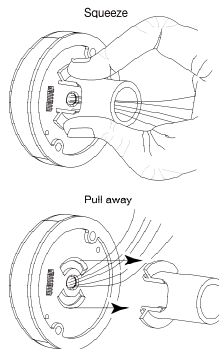


Figure 6: Removing the nipple from the back side of LS-101

For sheetrock or other solid surfaces, first remove the threaded nipple by squeezing it near the base of the LS-101. Then use the two screw holes located under the cover. Screws are not provided. Select #6 pan head screws appropriate for the mounting surface, typically about 7/8" long.

For measuring light, the rotation of the light sensor is not critical, but it may simplify setup and adjustment. Rotate the LS-101 so you can approach it from the side with the status LED. In a typical ceiling application, rotate the LS-101 so that the light sensor is nearest the window. In a wall mount application, it should be rotated so that the light sensor is near the top.

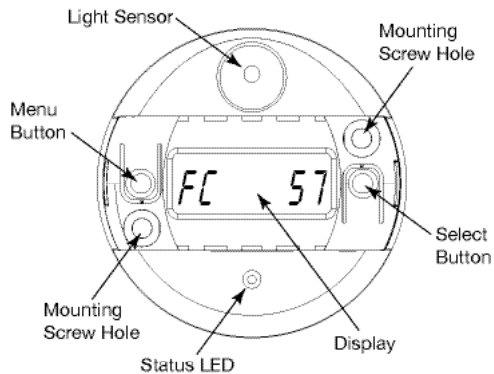


Figure 7: Features and orientation

WIRING

IMPORTANT: All low voltage wiring must be isolated from any line voltage wiring. Low voltage wiring should not be installed within the same conduit as line voltage wiring.

The unit has 5 color-coded wires. Connect to wires with insulation rated for the application. Normally recommended wire is 18 AWG 3 or 4 conductor cable with 300 Volt insulation. When the optional wall switch override is used, a separate 18 AWG 2 conductor with 300 volt insulation is recommended.

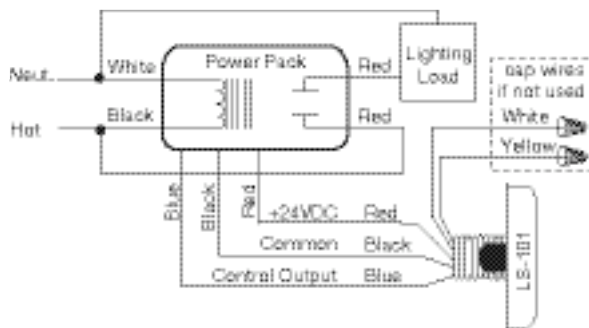


Figure 8: Basic LS-101 connections

Two connections are optional. Cap unused wires. See Operation for more information.

- White connects to the Occupancy Sensor output, see Figure 9.
- Yellow connects to the Wall Switch Override, see Figure 10.

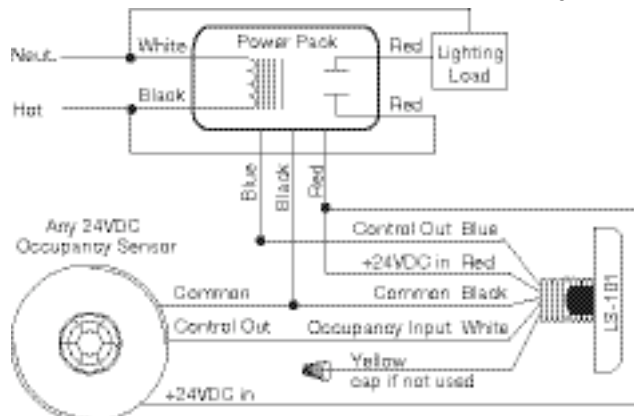


Figure 9: Occupancy sensor wiring, provides Hold ON while occupied

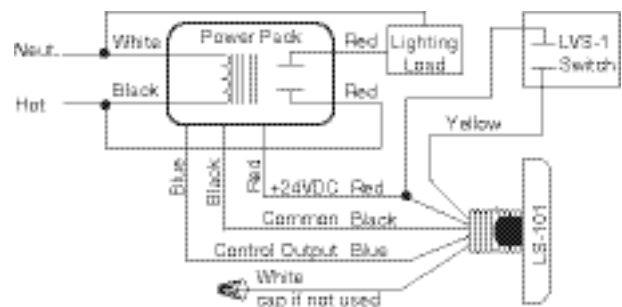


Figure 10: LVS-1 Override switch wiring

Using with the BZ-100 for Hold OFF while unoccupied

In this configuration, the occupancy sensor overrides the LS-101's light level input so that even when the light sensor sends a low light level signal to turn the lights ON, if the area is not occupied, the lights stay OFF.

This application requires the use of a BZ-100 power pack and two adjustments need to be made in the Setup Submenu (see Adjusting the LS-101).

Occupancy Hold ON must be set to: *OCC ENR*

Output must be reversed by setting: *OUT INV*

Figure 11 shows the wiring for this application. Notice that there is an optional LVS-1 Switch included. In this configuration the occupant may temporarily override the LS-101 signal to turn lights ON even when light levels are high. Pressing the LVS turns the lights ON and automatic light level will suspend for one hour. If during this period the wall switch is pressed again, the override is canceled and the lights return to automatic control.

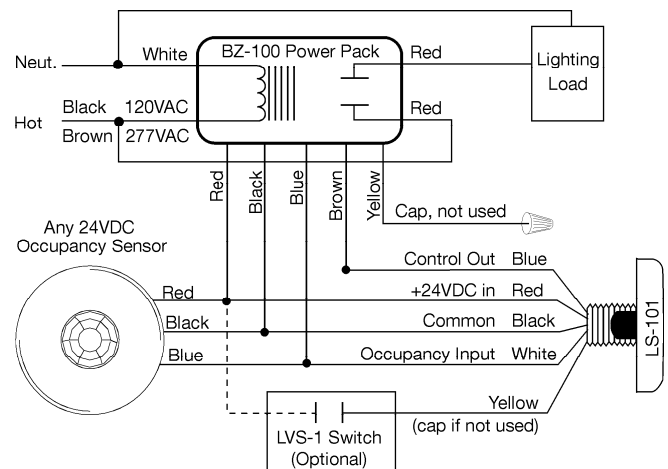


Figure 11: Occupancy Sensor, providing Hold OFF when unoccupied, ON when occupied AND low light level

QUICK START TO ACTIVATING THE LS-101 FOR BASIC OPERATION

1. Complete all wiring and turn on the power to the LS-101, all accessories and loads.
2. Verify that the display shows *LS101##* (the current software version).
3. Press the MENU button twice and verify that the display shows *CTRL ON* or *CTRL OFF*.
4. Press the SELECT button several times to verify that the load switches ON and OFF.
5. Press the MENU button once. Verify that the display shows *ON 7.5*.
6. Press SELECT repeatedly to change the display to the desired ON Setpoint. When the desired setpoint appears, press and HOLD the SELECT button for about 2 seconds, until **MEM** appears at the top of the display.
7. Press the MENU button once. Verify that the display shows *OFF #####* (up to 4 digits).
8. Press SELECT to change the display to the desired OFF Setpoint. When the desired setpoint appears, press and HOLD the SELECT button for about 2 seconds, until **MEM** appears at the top of the display.

The display automatically shuts down after 10 minutes without a button press. Attach the cover onto the LS-101.

ADJUSTING THE LS-101

All adjustments are made using the display and two buttons. Access the display by removing the cover. Set it safely aside. The display is oriented so that the letters are right side up when the light sensor is at the top, see Figure 7.

Buttons

There are two buttons, one on each side of the display, labeled Menu and Select. The Menu button moves the display forward through the menus. The Select button has two functions:

1. Press and release Select to step through the adjustment choices.
2. Press and hold Select until MEM appears in the display to change the adjustment to the selection shown in the display.

Display

When the LS-101 is powered up, the display shows: *LS101##*

"##" indicates the product's internal version number. This display also occurs if the LS-101 is reset to factory defaults.

The display goes to sleep when there is no activity. If no buttons are pressed for 10 minutes, then the display goes blank. Pressing either button wakes up the display.

Adjustment Menu


The menu is arranged so that the most common adjustments are readily accessible. For many applications, only the ON Setpoint needs to be adjusted. For more advanced applications, the SETUP menu offers more options.

There are also two special indicators that may appear above the normal characters in the display: **MEM** and **OVR**.

MEM shows which value is programmed into the LS-101.

When stepping through the available choices, MEM appears for the currently programmed choice. The MEM indicator appears for any new value programmed into the LS-101. For instance, if the Select button is used to step to a new value and then the Select button is pressed and held, after two seconds MEM appears. This indicates the new value is now programmed.

OVR appears when the LS-101 is being overridden. There are two ways to override the LS-101. The first is to use the Select button when viewing the Control (CTRL) menu. The second is to use the wall switch override, if installed. The first press of either of these overrides turns on the OVR indicator to show that the LS-101 is being overridden.

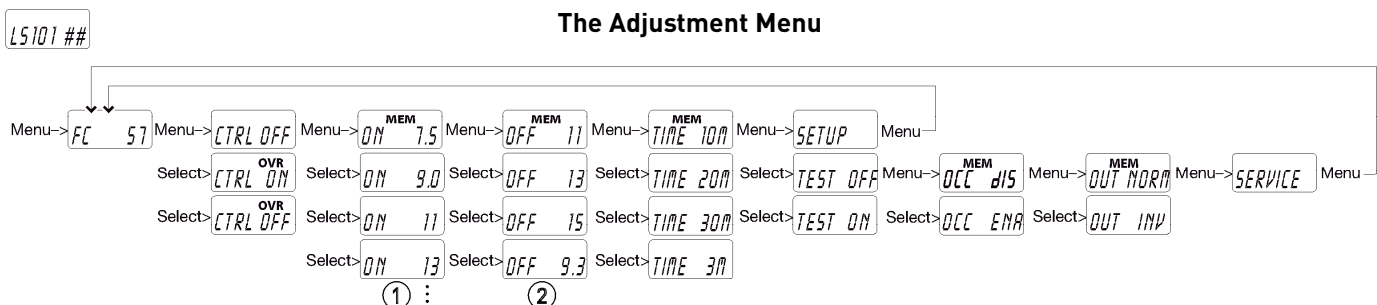

- ① Selections display beginning with the currently programmed setting and advance upward. When the maximum ON Setpoint is reached (850fc) the selections start over at 1.0
Selections are: 1.0, 1.2, 1.5, 1.8, 2.2, 2.7, 3.3, 4.0, 5.0, 6.0, 7.5, 9.0, 11, 13, 16, 20, 25, 30, 35, 45, 60, 90, 125, 180, 250, 325, 400, 475, 550, 625, 700, 775, 850.

MEM in this illustration indicates Factory Default setting.

- ② OFF selections are automatically calculated based on the ON Setpoint. The default deadband is 50% above the ON Setpoint. Press the Select button to change the deadband percentage: 25%, 50%, 75% or 100% above the ON Setpoint. The OFF Setpoint is automatically calculated with the new percentage each time you press Select. Calculations use multipliers of 1.25, 1.50, 1.75 and 2.0 for ON Setpoints up to 400fc. Only multipliers of 1.25 and 1.50 are available if ON Setpoint is 475fc or more.

Footcandles (*FC*)

This is normally the first screen visible when any button is pressed. It displays the current light sensor reading, which updates once a second.

Any object that changes the amount of light that reflects into the light sensor will change the readings. Whenever possible, lean away or back down from the LS-101 to see if the light level readings increase. Remove objects from the sensor's field of view if they are not normally in the area.

Control (*CTRL*)

This screen displays the logical state of the output to the power pack, either ON or OFF. It also allows temporary override of the output. Press Select to toggle the output to its opposite state. If the output was ON, one press turns it OFF and the **OVR** indicator appears. The status indicator LED also starts to flash slowly. Press Select again to turn the output ON again while **OVR** indicator remains lit. The output remains overridden ON or OFF until this screen is exited by pressing the Menu button. Upon exiting, the LS-101 automatically resumes automatic control, the OVR indicator turns OFF and the LED stops its slow flash.

If the display is left on this screen while the output is overridden, the override will timeout in 10 minutes and the LS-101 will return to automatic control.

Observing the Footcandles (FC) display while in override: If you want to observe the FC reading at the sensor while the lights are either ON or OFF, you can latch the override state, then maneuver the display back to the FC display to see how the lights ON or lights OFF states affect the light level coming into the sensor. To latch the output in an override state:

1. Access the CTRL menu item.
2. Press SELECT to override the output, then press and hold SELECT until the **MEM** indicator appears in the display.
3. To cancel the override, access the CTRL menu again then press the SELECT button or it will automatically timeout in 10 minutes.

ON Setpoint (*ON*)

When the light level drops below this setpoint for 20 seconds, the lights turn ON. Set this value for the lowest level that is acceptable during times when the space is occupied.

The ON setpoint range is from 1 to 850 footcandles.

The default value is 7.5 footcandles.

Changing either the ON or OFF setpoint initiates Test mode for one minute. During this one minute period, the time delays are temporarily made very short. Test mode is indicated by the rapidly flashing status indicator.

OFF Setpoint (*OFF*)

When the light level exceeds the OFF setpoint for the length of the Time Delay, the lights turn OFF.

Note that the OFF setpoint updates when the ON setpoint has been changed. The OFF Setpoint always maintains a deadband of 25%, 50%, 75% or 100% above the ON Setpoint. Any change in the ON setpoint causes the OFF setpoint to recalculate using the same percentage of deadband as selected for the previous value.

Time Delay (*TIME*)

This adjustment determines how long the light level must remain above the OFF setpoint before the lights turn OFF.

The available choices are 3 minutes, 10 minutes, 20 minutes and 30 minutes. The default value is 10 minutes.

Setup Submenu (*SETUP*)

The Setup submenu screen provides access to another set of options. Generally, these options are used in more advanced applications. Press the Select button to access the submenu.

Press the Menu button to bypass the Setup submenu and return to the initial footcandle screen.

Test Mode (*TEST*)

Test Mode temporarily bypasses the normal time delays to facilitate easy testing of the LS-101 light level settings. After 30 minutes, Test Mode ends and the normal time delays are restored.

Pressing the Select button in this menu initiates or cancels Test Mode.

When Test Mode is active, the LED status indicator flashes rapidly.

Occupancy Hold ON (*OCC*)

This adjustment option determines whether the occupancy sensor input is used to delay turning OFF or if the input signal is ignored.

The factory default is Disabled (*OCC DIS*). If the Occupancy function is to be used then it must be enabled (*OCC ENA*) from this screen.

Output (*OUT*)

This adjustment option allows the state of the output to be reversed. The choices are either normal (NORM) or inverted (INV).

When the LS-101 is set to Normal, the output signal is 0 VDC when the lights should be OFF and 24 VDC when the lights should be ON.

When the LS-101 is set to Invert, the output signal is 24 VDC when the lights should be OFF and 0 VDC when the lights should be ON.

Service (*SERVICE*)

This menu is for use as directed only by WattStopper technical support.

RESET TO FACTORY DEFAULTS

This is not a menu item but rather initiated at any point by pressing and holding both buttons for 5 seconds.

When the LS-101 has been reset, the screen will display:

LS-101## (current revision number)

LED STATUS INDICATOR

- Off** The lights are commanded ON by the LS-101
- On solid green** The lights are commanded OFF by the LS-101.
- Flashing green, once per second**
The LS-101 is in Test Mode
- Flashing green, once every four seconds**
Automatic control of the lighting is being overridden either by the wall switch or from the LS-101's Control menu.

TROUBLESHOOTING

Display does not display any information

- Press either button to wake up the display.
- Verify that the LS-101 is being powered with 24 VDC.

Lights do not switch when desired

- Use the CTRL menu to manually test ON and OFF control of the lighting. If the lights switch with manual control, then check the ON and OFF setpoints.
- Use test mode to verify setpoints.
- Use the footcandle display screen to compare the current values with the setpoints.

LED is OFF

- If the controlled lights are ON, then the LED is likely operating correctly.

LED is blinking

- If the blink is slow (one blink every four seconds) then the LS-101's output has been forced ON or OFF by an override, from the optional wall switch, or the Control menu.
- If the blink is fast (one blink every second) then the LS-101 is in test mode.

ORDERING INFORMATION

Catalog #	Description
LS-101	Light Sensor controller: Range 1 -1400 footcandles
B series Power packs	Output 24 VDC; 150 mA B120E-P 120 VAC; 60 Hz B277E-P 277 VAC; 60 Hz B230E-P 220-240 VAC; 50-60 Hz B347D-P 347 VAC; 60 Hz
BZ-100 Power pack	120/277 VAC; 60 Hz, Output 24 VDC; 150mA with Hold-ON and Hold-OFF inputs

WARRANTY

Watt Stopper/Legrand warranties its products to be free of defects in materials and workmanship for a period of five years. There are no obligations or liabilities on the part of Watt Stopper/Legrand for consequential damages arising out of or in connection with the use or performance of this product or other indirect damages with respect to loss of property, revenue, or profit, or cost of removal, installation or reinstallation.



Please
Recycle



2800 De La Cruz Boulevard, Santa Clara, CA 95050
Technical Support: 800.879.8585 • www.wattstopper.com
07076r2 4/2007